



“ Create Unlimited Productivity via Intelligent Machines ”

Visit our website for
more information

agibot.com

To purchase AGIBOT
products, please
contact us at

400 186 0818
Business hours: 9:30-12:00,
13:30-18:30 (weekdays)
store.agibot.com

For partnership inquiries,
please contact us at

Business cooperation:
business@agibot.com

Supplier self-recommendation:
sourcing@agibot.com

Media collaboration:
media@agibot.com

Office/R&D Center

Shanghai: Kangqiao Business Oasis, Caohejing, Pudong New Area

Beijing: Internet Financial Center, Haidian District

Shenzhen: Shenzhen Bay Technology & Ecology Park, Nanshan District

Data Collection Center

No. 5358, Zhoudeng Road, Pudong New Area, Shanghai

AGIBOT Factory

Lin'gang Intelligent Manufacturing Park, Fengxian District, Shanghai



— WeChat
Official
Account —



— Official
Website —

Follow us for the
latest updates




Product Brochure



AgiBot Innovation (Shanghai) Technology Co., Ltd

— Create Unlimited Productivity via Intelligent Machines —

AGIBOT A3

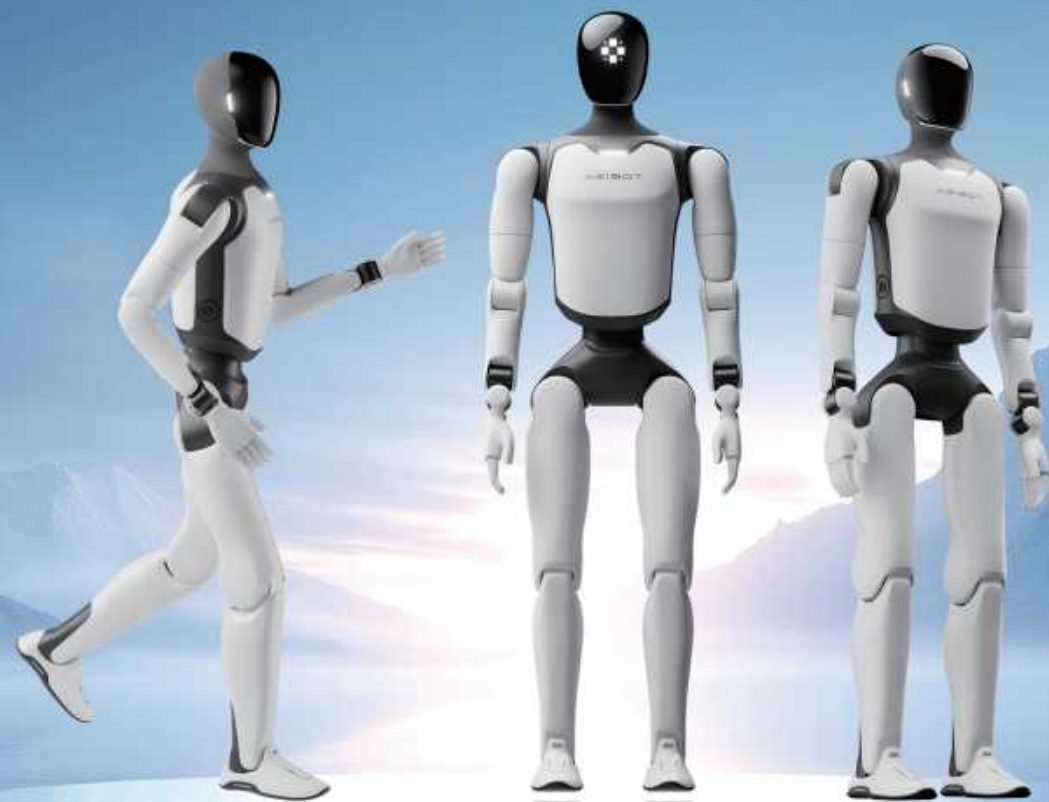

Scan to watch videos

AGIBOT A3

AGIBOT A3 is a new-generation full-size humanoid robot launched by AGIBOT in 2026, positioned as a "silicon-based star born for the stage". Weighing only 55kg yet delivering 12kW of instantaneous power, it achieves an industry-leading power-to-weight ratio of 0.218 kW/kg, enabling high-difficulty maneuvers such as aerial walking. It features a model-grade physique with fully customizable appearance and roles. Its dual-battery design delivers 10-hour extended endurance, with fast battery swapping without shutdown. Additionally, every A3 comes standard with swarm control technology, enabling seamless coordination of hundreds of units. Combined with multimodal perception and other intelligent capabilities, it stands out as a top performer in entertainment and commercial performance sector.

Specifications

Height
173 cm

Weight
55 kg

Endurance
10 h

Power-to-Weight Ratio
0.218 kW/kg (industry-leading, delivering exceptional burst performance)

Battery
Dual battery packs · 1152 Wh · Full-tab cells

Packaging
Standard UWB, single-unit accuracy <±10 cm

Fleet Control
Supports precise coordination of 100+ units

Network
Dual-module 5G with dual-SIM support

Packaging
Autonomous case loading and unloading; deployable by a single operator

Highlights

⚙️ Exceptional Performance, Extreme Lightweight

- 150 A maximum current, 12 kW power, and a 0.218 kW/kg power-to-weight ratio, comparable to million-dollar supercars. It can perform not only somersaults but also aerial walking
- Constructed with magnesium alloy, titanium alloy, and TPU flexible materials, creating an ultra-lightweight 55 kg body
- Natively compatible with LinkCraft, enabling everyone to freely create motions; with a rich content ecosystem for easy uploading and downloading

⚡ Extended Endurance, Instant Battery Swap

- Innovative dual-battery and full-tab cell technology, with industry-leading power management, delivering up to 10 hours of endurance
- Redundant dual-battery design for more stable and safer power supply
- Supports fast hot-swappable battery replacement for 24-hour continuous operation; 10-second battery swap makes range anxiety a thing of the past



Striking Design, Fully Customizable

- 173 cm golden ratio, model-grade head-to-body proportions, powerful on the inside with a refined, elegant exterior
- Slender limbs and graceful posture; highly versatile styling that suits any outfit, truly a "walking wardrobe"
- Supports customization from color film application to full housing customization, and also enables character design via LinkSoul to meet diverse customer customization needs

Superior Swarm Control, Hundreds in Sync

- Standard UWB centimeter-level fusion positioning solution enables coordinated swarm operation of hundreds of units out of the box, with no modifications required.

Enhanced Interaction, Seamless Communication

- Industry-first shoulder touch sensing redefines interaction in the embodied era; combined with voice and multimodal interaction for barrier-free communication and strong user affinity
- 360° omnidirectional audio pickup with multi-array microphones ensures clear recognition even in high-noise environments
- Standard 5G global connectivity: eSIM + SIM card (card slot SIM), with domestic LGA module and overseas M.2 modules, ensuring connectivity without limits

Reliable Platform, Easy Deployment

- Full-size humanoid robot that is portable by a single person; foldable packaging, autonomous case loading and unloading, and can be easily transported in an SUV.
- Inherits the excellent DNA of AGIBOT A2, having passed 92 automotive-grade rigorous tests before delivery, with a designed lifespan of up to 3 years
- Fully open interfaces support secondary development and are compatible with entertainment, commercial performances, scientific research, and education scenarios—one base, enabling endless possibilities

Application Scenarios

... Commercial Performances ...

Top-tier dancers/martial artists, brand ambassadors, and dynamic art installations



... Interactive Entertainment ...

Self-posing cosplayers, tech influencers in live streams, and themed park tour guides



... Research and Education ...

Cutting-edge research in embodied AI



AGIBOT G Series

AGIBOT G2 | AGIBOT G2 Air



Scan to watch videos

AGIBOT G2

AGIBOT G2 is an industrial-grade interactive embodied operational robot, equipped with exceptional motion, perception, and interaction capabilities. It is suitable for industrial, commercial, home, and research scenarios. With high-performance joints, sensors, and domain controllers, AGIBOT G2 achieves omnidirectional obstacle avoidance, high-precision force-controlled operations, and multi-user intelligent interaction. With remote control and automatic charging dock kits, it supports data collection, teleoperation, and autonomous recharging. The system provides a rich set of SDK interfaces, supporting flexible expansion and deep customization to meet diverse scenario deployment needs.

Specifications

Total Degrees of Freedom (excluding end effector)	Head DoF	Arm DoFs	Single-Arm Rated Load	Arm Force Control	Max Movement Speed
26	3	7	5 kg	Full Joint Torque	1.5 m/s
Embodied Edge Computing Platform NVIDIA Jetson T5000 2070 TFLOPS (FP4)		Endurance	Sensor Configuration 3 * fisheye cameras + 2 * 3D LiDARs + 8 * ultrasonic sensors + 3 * RGBD cameras + 1 * wide-angle binocular camera		Secondary development
		4 h+			Yes

Highlights



Superb Operational Capabilities

- Powered by a high-performance chip with maximum computing power of 2070 TFLOPS (FP4)
- High-precision force-controlled dual arms for sub-millimeter accuracy operations
- RL toolchain, enabling deployment and task switching with few demonstrations

Highly Flexible Motion Control

- 5-DOF waist-leg structure for easy navigation in narrow spaces
- 26-DOF body with optional 19-DOF dexterous hands
- Omnidirectional movement and crab-walking capabilities for enhanced mobility

Ultra-Agile Remote Teleoperation

- Low-latency BVLOS teleoperation
- One-operator, multi-machine time-sharing operation

Multimodal Intelligent Interaction

- Supports continuous multi-user voice interaction and knowledge base Q&A
- Microphone array + high-power speaker
- Multicolor interactive facial display synchronized with facial expressions and body movements, enabling interaction with external devices.

Comprehensive Safety Assurance

- Active obstacle avoidance and collision force dissipation to reduce safety risks
- Data-driven intelligent decision-making for improved operational efficiency
- 360° perception with no blind spots

Extended Dual-Battery Endurance

- Hot-swappable dual batteries for uninterrupted operations
- Autonomous return-to-charge for rapid full recovery

Application Scenarios

... Industrial handling ...



... Logistics sorting ...



... Precision operations ...



... Commercial guidance ...




... Security inspection ...




... Patrol inspection ...



... Retail ...

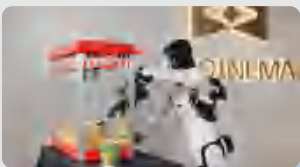

... Scientific research ...

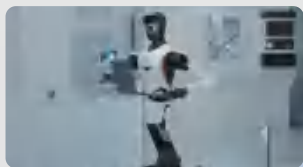

AGIBOT G2 Air

AGIBOT G2 Air pioneers a new paradigm of "human-robot integration" for operation and data collection. Through its real-robot companion-style data collection mode, it enables simultaneous completion of high-frequency light-duty tasks and collection of high-quality multimodal training data in a single operation. This breaks the trade-off between efficiency and data quality in data collection, providing continuous, high-quality real-world data for the embodied AI data flywheel. Its "small, fast and agile" characteristics redefine lightweight operations in the field of embodied AI. Deeply adapted to spatial constraints and efficiency requirements of real-world scenarios, it navigates efficiently through complex routes and narrow passages, supporting high-frequency light-load operations in diverse settings such as convenience stores, supermarkets, industrial inspections, and hotel services.

Specifications

DOFs per Arm	Rated Load per Arm	Arm Span	Max Movement Speed	Min Passage Width	Endurance
7	3 kg	750-800 mm	1.5 m/s	≥ 800 mm	4 h+

Note: Specifications are for reference only, subject to final delivery.

Highlights



Integrated Operation and Data Collection

The "human-robot integration" real-robot companion-style operation mode enables simultaneous task completion and high-quality real-scene data collection, significantly reducing data collection costs and operational complexity

UMI Homogeneous Layout Design

It maintains a sensor layout consistent with UMI data acquisition devices, ensuring alignment between egocentric data and real-world robot data from the source.

Agile, Fast, Compact

Designed to meet the space constraints and efficiency requirements of real-world commercial scenarios, the overall dimensions are 660×680×1750mm. Its omnidirectional base allows for in-place turning within an 800mm wide passage. The joints are highly agile and responsive, closely matching human joint movement capabilities

Modular Computing Power Expansion

The main controller supports communication, video encoding, state management, basic navigation, teleoperation, and data collection. It also reserves a 10Gb Ethernet port for connection to high-performance computing platforms, enabling smooth operations from basic tasks to autonomous AI capabilities

Application Scenarios

... Convenience stores ...



... Large supermarkets ...



... Industrial tasks ...



... Data collection ...




... Hotel services ...




Genie Sim 3.0

Genie Sim 3.0 integrates 3D reconstruction and visual generation to create digital twin-level high-fidelity environments. It pioneers LLM-driven scene generalization technology, enabling generation of tens of thousands of scenes in minutes. It also open-sources a simulation dataset with over 10,000 hours of real robot operation scenarios, and builds a multi-dimensional intelligent evaluation system covering 100,000+ scenes to provide a comprehensive profile of model capabilities.

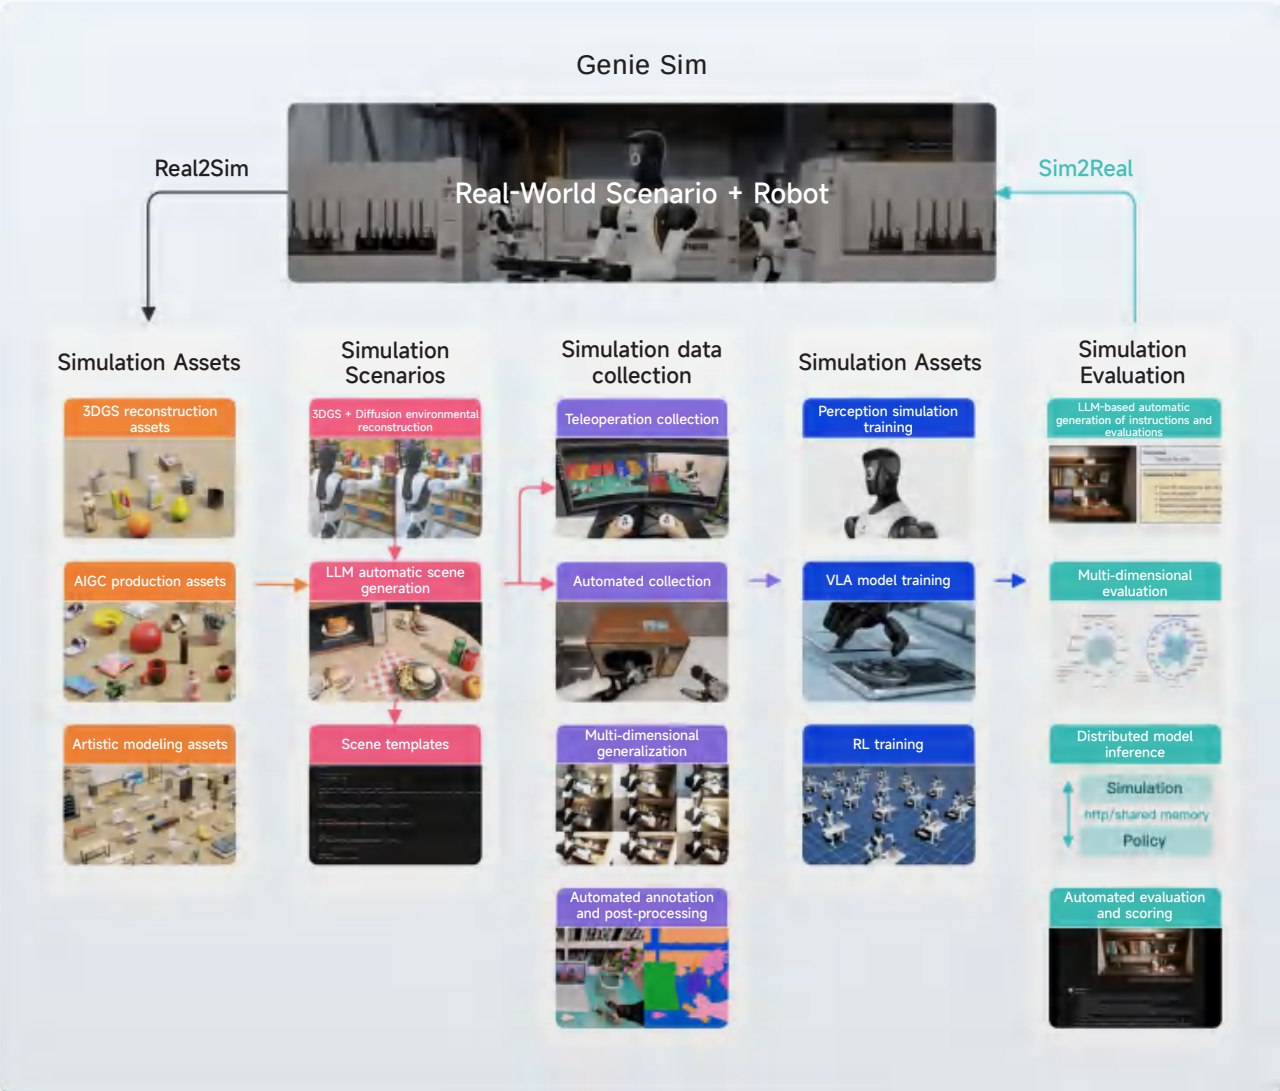

Five core highlights,
ushering in a new era
of embodied simulation

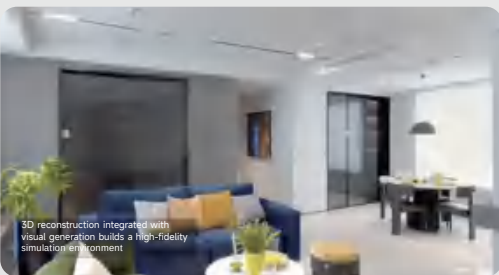

01

Digital Twin-Level High-Fidelity Simulation Environment

Genie Sim 3.0 integrates 3D reconstruction, visual generation, and a physics engine, achieving unified visual realism and physical accuracy.


- Precise reconstruction: MetaCam combines multiple sensors with RTK to achieve millimeter-level environment replication.
- Visual enhancement: Visual generation models synthesize new perspectives to enhance simulation realism.
- Asset generation: High-precision simulation models can be generated from a 60-second 360° capture video, improving modeling efficiency.

02

Pioneering Natural Language-Driven Scene Generation and Generalization

Genie Sim 3.0 supports natural language-driven, minute-level automatic generation and generalization of massive scenes.

- Conversational creation: Input natural language instructions to automatically build structured simulation scenes.
- Intelligent editing and generalization: Supports conversational augmentation, detail adjustment and layout tuning to output target scenes.

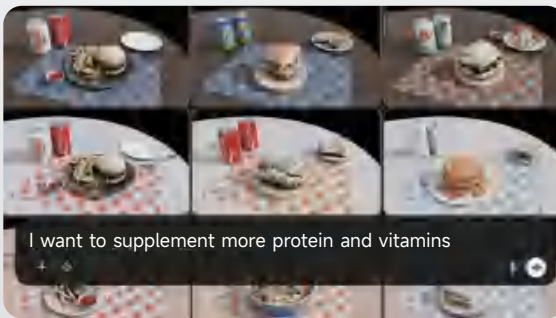


04

100,000+ Simulation Scenarios for Comprehensive Model Capability Profiling

Based on over 100,000 scenarios, a multi-dimensional evaluation system is established, integrating LLM and VLM technologies to map in-depth capability profiles for models from multiple dimensions. It is the most comprehensive and authoritative evaluation benchmark for embodied AI models in the industry today.

- Automated evaluation generation: LLM automatically generates evaluation instructions and converts them into executable workflows.
- Multi-dimensional in-depth evaluation: VLM conducts comprehensive evaluation from multiple aspects to clarify capability boundaries and optimization directions.
- Sim-to-Real consistency: The difference between simulation and physical evaluation is < 10%, enabling efficient validation without physical hardware.

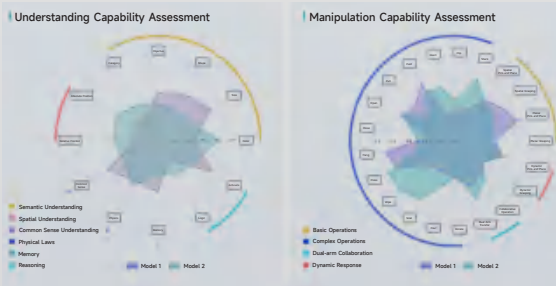


03

Fully Open-Source Simulation Dataset and Efficient collection Solution

It provides the largest open-source dataset in the embodied AI field, covering more than 200 tasks and over 10,000 hours of operation, laying a solid data foundation for model development.

- Multi-dimensional data: Includes multi-sensor information such as RGB-D, binocular vision, and full-body joint states, covering diverse generalization conditions.
- Intelligent collection tools: Dual-mode collection + automatic annotation for effective data production.
- Error recovery mechanism: Automatic fallback and resume collection upon task failure to reduce data loss.
- Zero-shot Sim2Real: After training, simulation training can be transferred to physical machines with zero-shot, achieving better results than training with real-world data.

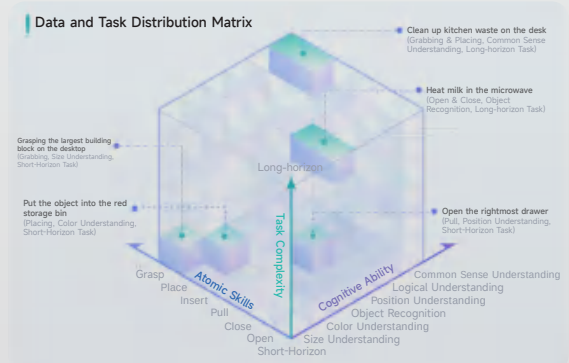

05

Covers Real-World Operation Scenario Simulation

Built on AGIBOT's experience in large-scale commercial and industrial deployment, Genie Sim 3.0 is the first open-source platform that deeply integrates simulation data collection and evaluation for real-world operation scenarios, bridging the gap between laboratory algorithms and industrial implementation.


- Real-world scenario restoration: Covers industrial and commercial scenarios such as supermarkets, logistics, power grids and production lines.
- Full-process simulation validation: Rapidly generates data and evaluations to reduce costs and improve efficiency, enabling zero-hardware deployment validation.

Genie Studio

One-Stop Development Platform for Embodied Models

Designed for robotics industry bases, research institutions, and enterprises, compatible with the entire AGIBOT G series, this full-process platform integrates data assets, data processing, data annotation, dataset generation, model training, simulation evaluation, and intelligent deployment, accelerating the commercial deployment of embodied AI in industrial, logistics, security, and tour guide scenarios.

Genie Studio One-Stop Development Workflow

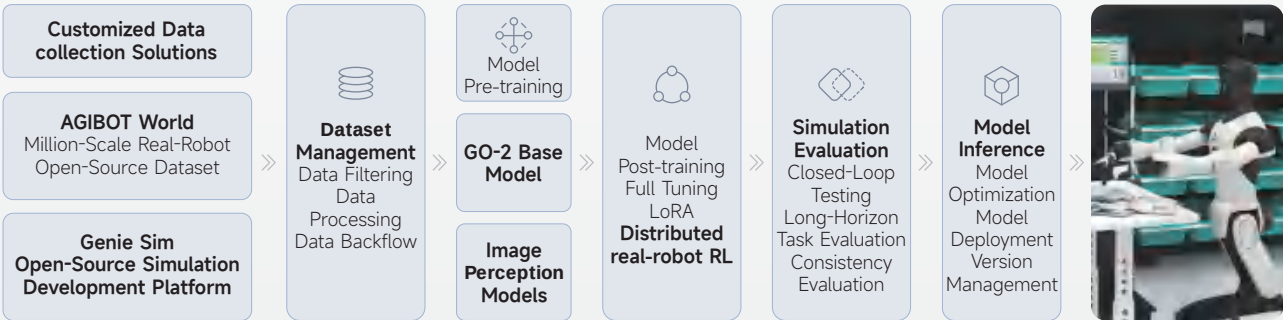


Distributed Real-Robot RL

Distributed real-robot RL is a reinforcement learning training framework that supports multiple RL algorithms and task structures. It provides unified support for generalized model output across multiple robots, platforms, and scenarios, enhancing large-scale real-robot RL training capabilities. It's deeply integrated with our proprietary training framework and the Genie Studio platform, creating an end-to-end real-robot training pipeline.

- High Usability: Simple to use, allowing for one-click training node configuration and model training on the Genie Studio platform.
- High Reusability: Meets multi-model, multi-business, and multi-algorithm needs, reducing redundant engineering work.
- High Expandability: Unifies scheduling of training, inference, and environmental computing resources, supporting elastic expansion and efficient data transfer.

GO-2 Embodied Base Model, Defining a New Height of "Unity of Knowledge and Action"

The GO-2 embodied base model completes high-level action inference through an Action Chain-of-Thought (ACoT), enabling robots to understand how to generate "executable" work plans, which are then stably executed in real environments through an asynchronous dual-system. In this way, the GO-2 embodied base model employs an asynchronous dual-system design featuring low-frequency planning + high-frequency tracking, enabling robots to maintain planning stability while achieving precise and robust action control.

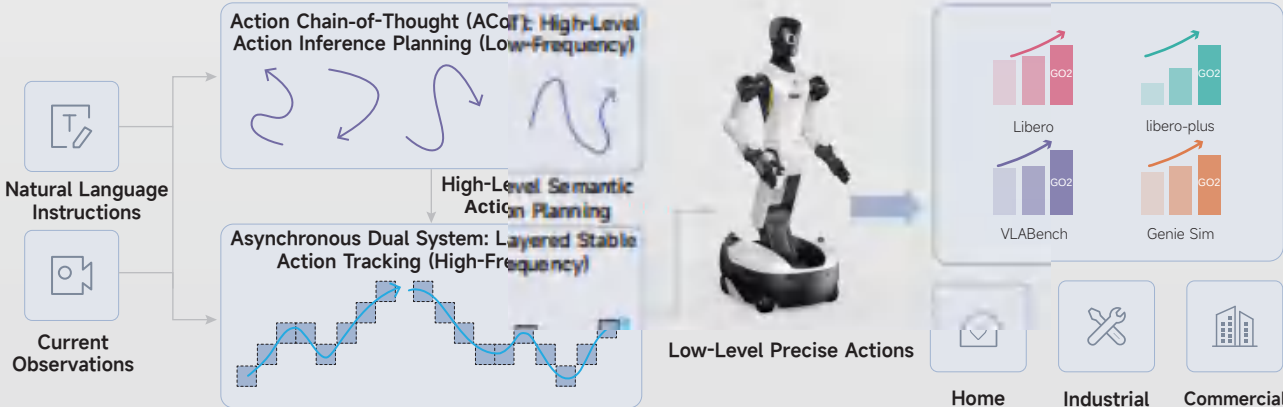


Genie Studio Agent

A Low-Code Agent Application Platform Designed for Embodied Operation Scenarios

This platform provides out-of-the-box standardized solutions, supporting one-stop robot application deployment. It serves as the software infrastructure for the entire robot lifecycle—from development to deployment and from operation to optimization, covering capabilities such as VLA, reinforcement learning, visual perception, motion control, and navigation. It enables non-technical personnel to easily configure and deploy robot applications, significantly lowering the entry barrier for embodied AI.

Intelligent Task Orchestration for Simplified Development

Users and partners can independently build robot applications via workflows combined with RL, VLA, and perception model toolchains. Workflows support multiple trigger modes, scheduled tasks, and multi-robot collaborative operations; The platform supports simulation and physical-robot debugging, allowing for real-time viewing of robot health status and task execution progress.

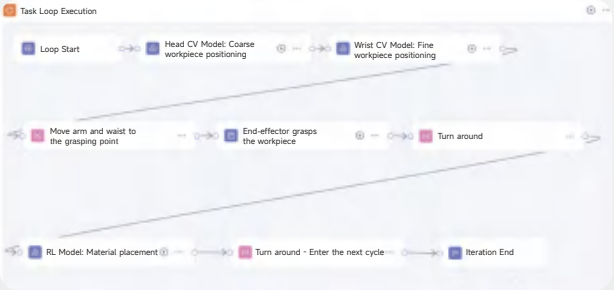

Simulation Editing and Trial Run, "Rehearsing" Real Production in 3D Virtual World

A Built-in 3D scene reconstruction and simulation system allows users to complete full-scale rehearsals in virtual environments before actual deployment. All risks and collisions are mitigated in advance in the simulation environment, significantly reducing on-site commissioning time and trial-and-error costs.



Intelligent Operation Platform

Robot Supervision

Unified monitoring of device status and task progress, enabling rapid identification of anomalies and tracking of critical events

Data Operation

Aggregates data across the entire operation chain and outputs key industrial KPIs by production line, process, and equipment, driving operational decision-making

Teleoperation Takeover

Remote intervention for anomalies or emergencies with real-time device audio/video streaming; supports full audit trails, permissions configuration, and post-event auditing

Data Backflow Visualization

Feeds failure data from operations back into training and simulation phases, forming a data closed-loop to support continuous model iteration

AGIBOT X Series

AGIBOT X2 Ultra | AGIBOT X2 | AGIBOT X2 REC



Scan to watch videos

AGIBOT X2 Ultra

AGIBOT X2 Ultra features powerful capabilities in motion, interaction, and task intelligence. It is tailor-made for guided tours and retail, guided performances, or research & education scenarios, with a variety of optional configurations, enabling broader scenario expansion and flexible application exploration.

Specifications

Height 131 cm	Weight 39 kg	Intelligent Perception Interactive RGB Camera + Binocular RGB Camera + RGBD Camera + LiDAR + Rear Camera	Total DOFs 30	DOFs per Arm 7	Max End Effector Payload 3 kg
Max Walking Speed 2 m/s	Battery Capacity 500 Wh	Endurance 2 h	Proactive Interaction Supported	High-Performance Computing Module NVIDIA Orin NX 16GB	Secondary Development Yes

Highlights



Extensive Optional Configurations:

End effectors | Charging dock | BVLOS teleoperation

- Flexible end effector configuration: Optional dexterous hands and grippers to meet operational needs and adapt to customized application scenarios
- Autonomous recharging: Optional charging dock, enabling autonomous navigation and path planning for automatic return and recharging, forming a closed-loop operation
- BVLOS teleoperation: Optional VR teleoperation accessories, enabling zero-latency audio-video synchronization for BVLOS remote operation and remote avatar applications



Autonomous Intelligence:

Efficient mapping | Navigation & obstacle avoidance | Autonomous explanation and Q&A


- Multi-dimensional mapping: Equipped with RGBD cameras, interactive RGB cameras, binocular RGB cameras, rear RGB cameras, and LiDAR; a single mapping process enables deployment for exhibition hall guidance
- Route planning and obstacle avoidance: Equipped with autonomous path planning and navigation with obstacle avoidance, capable of detecting both dynamic and static obstacles
- Proactive greeting, explanation, and Q&A: Supports facial recognition and proactive greeting for strangers, knowledge base Q&A, and multilingual explanation, as well as 30+ facial expressions and a wide range of explanatory gestures, enabling an integrated "greeting - explanation - Q&A" service
- Effortless customization: Built-in exhibition hall presentation toolchain, enabling zero-threshold creation and editing of explanation actions and scripts, with support for customizable expressions, motions, voice, walking speed, duration, positioning, and motion sequencing
- Compatible with LinkCraft: Zero-code training for motion control, enabling action imitation, voice narration, and group control and coordinated performance
- Compatible with LinkSoul: Interaction customization with personalized robot personas, wake words, voice tones, and more supporting customized business application requirements



Application Scenarios

••• Store Greeting and Retail Guidance •••

Dynamic interaction, customer greeting, and personalized shopping assistance

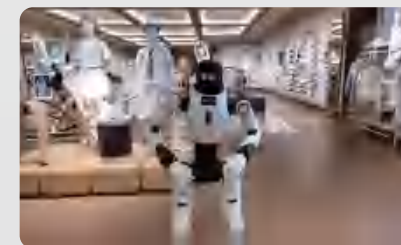

••• Customer Attraction and Guidance •••

Customer attraction and interaction, queue management, and autonomous customer guidance



••• Research and Education •••

Rich interfaces for secondary development and a stable robotic platform



AGIBOT X2

AGIBOT X2 is a half-size humanoid robot engineered for entertainment and commercial performance scenarios, delivering exceptional cost-performance. It supports a wide range of full-body motion switching, with rich motion capabilities and multiple preset actions. It features strong multimodal interaction, proactive interaction, and customizable interaction capabilities, and adopts a flexible material shell with a compact, lightweight structure, ensuring safe and reliable operation.

Specifications

Height 131 cm	Weight 35 kg	Intelligent Perception Interactive RGB Camera	Total DOFs 25	DOFs per Arm 5	Max End Effector Payload 3 kg
Max Walking Speed 2 m/s	Battery Capacity 500 Wh	Endurance 2 h	Proactive Interaction Supported	Computing Module RK3588 (motion control) RK3588S (interaction)	Built-in Motion Skills Yes

Highlights

- 
- Dynamic Interaction:**
Customized interaction | Multimodal interaction | Facial expressions | Touch feedback

 - Customized interaction: Compatible with LinkSoul, enabling personalized configuration of robot persona, wake words, voice tone, and more, supporting customized business application needs
 - Proactive multimodal interaction: Equipped with environment recognition, human facial recognition, gesture recognition, and body movement recognition, enabling extended capabilities such as proactive greeting and handshake interactions
 - Animated expressions: Over 30 facial expression animations, effectively conveying the robot's status
 - Touch feedback: Supports head-touch-triggered voice interaction feedback
 - Diverse interactive skills: Supports multilingual interaction, motion control commands, singing, Chinese idiom chain games, and ancient poetry recitation, enabling engaging and dynamic interactions
- Rich Motion Control:**
Full-body motion | Self-righting from lying position | Motion generation | Motion choreography

 - Diverse preset motions: 20+ preset motions with human-like and agile movement, enabling easy deployment
 - Single-person operation: Supports full-body motion transitions such as self-righting from lying and sit-to-stand; with control via remote or mobile app, enabling single-operator deployment
 - Compatible with LinkCraft: Zero-code training for motion control, enabling action imitation, voice narration, etc.
 - Fleet control toolchain: Supports coordinated performance across multiple robots, enabling more efficient and flexible group choreography
 - Premium performance resources: Offers trendy dance routines, high-energy martial arts, and advanced stunt performances, providing one-stop support for entertainment and commercial performance scenarios

Application Scenarios

... Cultural & Entertainment Tourism ...

Full-body dance / martial arts and stunts



... Customer Attraction ...

Welcoming host/proactive greetings/customer attraction



... IP Ambassador ...

Interaction customization/skin customization



AGIBOT X2 REC

AGIBOT X2 REC is purpose-built for data acquisition scenarios, equipped with extensive teleoperation devices and supporting integration with Genie Studio, providing a one-stop "acquisition-training-testing-deployment" data acquisition solution. It enables robots to learn while executing tasks in real-world environments, efficiently collecting high-quality data and accelerating the R&D iteration and real-world deployment of embodied intelligence models.

Specifications

Height 131 cm	Weight 40 kg	Intelligent Perception Interactive RGB Camera + Binocular RGB Camera + Head RGBD Camera + LiDAR + Rear Camera + Wrist RGBD Camera	Total DOFs 30	DOFs per Arm 7
End Effector OmniHand OmniPicker 3	VR Teleoperation VR Headset + Handheld Controller + Motion Tracking Sensor	Max End Effector Payload 3 kg	High-Performance Computing Module NVIDIA Orin NX 16 GB	

Highlights

- 
- Full-Body Teleoperation:**
Full-body motion control foundation model | Multi-end-effector compatibility | Rich perception matrix | Data acquisition 2.0


 - Full-body motion control foundation model: Unified coordination of upper limbs, lower limbs, torso, and end effectors, enabling more natural teleoperation and more stable task execution
 - Multi-end-effector compatibility: Supports dexterous hands or grippers, compatible with homogeneous and heterogeneous data acquisition setups, balancing fine manipulation, general grasping, and task expansion capabilities
 - Rich perception matrix: Integrates multiple sensors, including RGB cameras on the head, chest, and back, RGBD cameras on the head and wrists, LiDAR, and IMU, supporting environment perception, motion capture, localization and navigation, and fine manipulation
 - Data acquisition 2.0: The industry's first half-size humanoid data acquisition solution deployable in real-world scenarios, supporting full-body control, single/multi-person data acquisition across supermarkets, stores, home, and other application scenarios
- 
- Closed-Loop "Acquisition - Training - Testing - Deployment" R&D:**
One-stop platform | BVLOS data acquisition | Large-scale training

 - One-stop platform: Integrates with the Genie Studio embodied AI development platform, providing full-stack capabilities across data acquisition, training, simulation, and deployment
 - BVLOS data acquisition: Supports both line-of-sight and BVLOS data acquisition via a self-developed VR app, enabling cross-space and long-distance data acquisition
 - Large-scale training: Million-scale real-world and simulation datasets, covering 100+ real-world scenarios across five major industries, enabling end-to-end workflows for model training, fine-tuning, quantization, and deployment



Application Scenarios

... Data Acquisition in the Data Collection Site ...

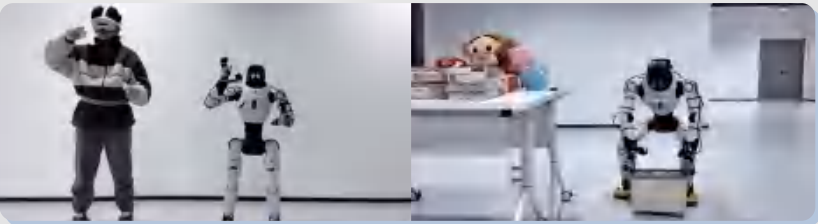


... Real-World Data Acquisition and Application ...


Healthcare Services




Supermarket Services



Hotel Services



Household Services

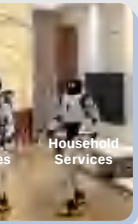

AGIBOT D1 Series

D1 MaxPro | D1 Max | D1 Ultra | D1 Ultra-W | D1 Pro | D1 Edu

D1 MaxPro

AGIBOT D1 MaxPro is a quadruped robot featuring superior payload capacity and exceptional mobility. It is equipped with reinforcement learning-based motion control algorithms, enabling all-terrain adaptability. Built-in autonomous patrol and environmental perception modules allow it to handle industrial inspection and emergency rescue scenarios with ease.

Specifications

Weight	Load Endurance	Rated Payload	Continuous Stair-Climbing Height	Max No-Load Speed	Max Climbing Angle
68 kg	2 h	50 kg	30 cm	3 m/s	45°

Highlights



Upper payload

- Supports sustained payloads of up to 50 kg, meeting the demands of heavy-duty, heavy-load transport, and material handling scenarios



Guaranteed Endurance

- Equipped with a 2160 Wh high-capacity battery to work continuously for 2 hours at the rated payload, or for 5.5 hours underload, delivering better performance compared to similar products
- Supports quick battery swapping and optional autonomous charging dock



Exceptional Mobility

- Highly agile with strong adaptability across diverse terrains
- Capable of climbing continuous stairs up to 30 cm and open-riser industrial stairs, with a proven mechanism for self-righting after falls



Robust Environmental Adaptability

- IP67-rated industrial protection, enabling stable operation in temperatures ranging from -20°C to 55°C
- Reliable performance under extreme weather conditions, ensuring stable operation in harsh environments



Application Scenarios


... Logistics and Transportation ...

Heavy-payload operations



... Firefighting and Emergency Response ...

Fire detection, emergency communication

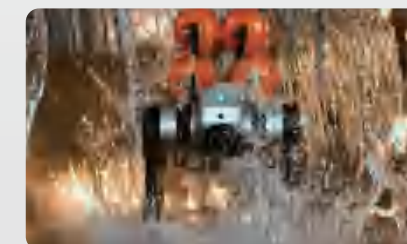

... Industrial Inspection ...

Meter reading, defect detection, and abnormal temperature sensing



Scan to watch videos

D1 Max

AGIBOT D1 Max features a lightweight design, high payload capacity, long endurance, robust protection, and agile yet stable locomotion. Powered by an embedded reinforcement learning motion model, the robot demonstrates exceptional robustness with capabilities such as impact resistance, disturbance rejection, self-righting after falls, and dynamic self-adaptation. It is equipped with a comprehensive perception suite, including vision, LiDAR, ultrasonic, and IMU sensors, which enables advanced functions like environmental reconnaissance, autonomous navigation, and target recognition.

Specifications

Weight	Load Endurance	Battery Module Capacity	Continuous Stair-Climbing Height	Max Speed	Max Climbing Angle
41 kg	3.5 h	10 Ah*2	25 cm	8 m/s	45°

Highlights



Enterprise-Grade Reliability

- More durable, robust, and environmentally resistant, supporting all-weather stable deployment
- IP67-rated protection, designed for long-term operation in outdoor and industrial environments, effectively reducing equipment downtime and maintenance costs



Enhanced Task Endurance

- Over 5 hours of endurance underload and stable 3.5 hours under rated payload
- Operating Range of over 29 km underload and no less than 18 km under rated payload
- Reduces manual intervention, enhancing continuous and sustained operation capabilities



Superior Payload Platform Capabilities

- Reliable under heavy loads with long-term stable performance, supporting multi-industry upper payload requirements
- Rated payload of 25 kg and maximum payload of 150 kg, enabling reliable performance across diverse tasks
- Equipped with a wide range of communication, power, and control interfaces, supporting flexible secondary development and in-depth industrial integration



Enhanced Mobility

- Fast response, broad operational coverage, and high operational efficiency
- Max movement speed of 8 m/s, enabling faster response, broader coverage, and higher operational efficiency
- Max climbing angle of 45° and obstacle-crossing height of 80 cm, enabling easy handling of complex terrain and improving task success rates



Ideal for Scalable Deployment

- Features a dual-battery hot-swappable design, minimizing downtime and improving long-duration operational capability
- Intelligent wheel/leg mode switching: Wheel mode offers stable and efficient movement with extended endurance, while leg mode provides superior terrain adaptability for multi-scenario operations

Application Scenarios

Industrial Inspection

Meter reading, defect detection, and abnormal temperature sensing



Security Patrol

Threat inspection, on-site management, and critical point deployment



D1 Ultra/Ultra-W

AGIBOT D1 Ultra/Ultra-W is a compact, swift, and highly agile robot. Powered by an embedded reinforcement learning-based motion algorithm, it autonomously adapts to various types of ground surfaces, achieving all-terrain locomotion. It is widely used in scenarios such as security patrol, research & education, and interactive entertainment.

Specifications

I Ultra

Protection Rating	Weight	Load Endurance	Operating Range	Continuous Stair-Climbing Height	Rated Payload
IP54	16 kg	1 h	6 km	16 cm	5 kg

I Ultra-W

Protection Rating	Weight	Load Endurance	Operating Range	Max Climbing Height	Rated Payload
IP 54	22 kg	1 h	9 km	60 cm	5 kg

Highlights




Reliable and Robust Dustproof and Water-Proof Architecture Designed per Strict Standards

- High dust and water protection levels, capable of handling splashes, moisture, mud, and dusty environments with ease
- Aluminum alloy vacuum die-casting process featuring a lightweight structural design
- Core components treated with sealed protection and anti-corrosion treatment



Powerful Mobility for Complex Terrain

- RL-based gait control, enabling adaptability to complex terrains and diverse ground surfaces, with self-balancing, anti-tipping, and disturbance rejection capabilities

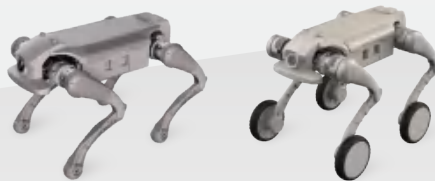

High-Performance Motor with High Torque, Impact Resistance, and Calibration-Free Operation

- Peak torque of 48 N·m, delivering high torque output for complex terrains and high-load operations
- Validated through millions of impact tests, ensuring long module lifespan, strong impact resistance, and suitability for high-intensity multi-scenario applications
- Equipped with a dual-encode controller, eliminating the need for zero-position calibration and enabling immediate operation upon startup



Flexible Development with Modular and Payload Adaptation

- Standardized interfaces support integration with various payload modules for multi-scenario application development
- Open SDK for secondary development, supporting upper payload integration

Application Scenarios

Security Patrol

Threat inspection, on-site management, and critical point deployment



Pipeline Corridor Inspection

Cable temperature measurement and outer sheath damage detection



Educational Research

Comprehensive technical support to help users build robotic research system models



D1 Pro/Edu

AGIBOT D1 Pro/Edu is a compact, swift, and highly agile robot. Powered by an embedded reinforcement learning motion algorithm, it autonomously adapts to various types of ground surfaces, achieving all-terrain locomotion, and supports secondary development and personalized customization.

Specifications

Weight	Endurance	Rated Payload	Continuous Stair-Climbing Height	Max Speed	Vertical Jump Height
15.5 kg	1-2 h	5 kg	16 cm	3.5 m/s	35 cm

Highlights



Powerful Mobility for Complex Terrain

- RL-based gait control, enabling adaptability to complex terrains and diverse ground surfaces, with self-balancing, anti-tipping, and disturbance rejection capabilities



High-Performance Motor with High Torque, Impact Resistance, and Calibration-Free Operation

- Peak torque of 48 N·m, delivering high torque output for complex terrains and high-load operations
- Validated through millions of impact tests, ensuring long module lifespan, strong impact resistance, and suitability for high-intensity multi-scenario applications
- Equipped with a dual-encode controller, eliminating the need for zero-position calibration and enabling immediate operation upon startup



Flexible Development with Modular and Payload Adaptation

- Standardized expansion interfaces for secondary development and personalized modification

Application Scenarios

Commercial Performances

Group performances, paid rentals



Interactive Entertainment

Playful combat demonstrations, jumps, backflips, forward leaps, and bipedal standing



Educational Research

Comprehensive technical support to help users build robotic research system models



* Secondary development features are available only in the D1 Edu version

AGIBOT OmniHand Series



Scan to learn more

OmniHand 3 Lite

OmniHand 3 Lite is a dexterous hand built with hyper-durable, user-friendly materials, delivering exceptional robustness. The entire hand has undergone multiple testing, including pendulum impact tests and multi-angle high-drop tests, ensuring excellent impact resistance and reliability. It enables robots to perform intense dynamic movements, such as one-handed cartwheels with ground support. Additionally, it is natively compatible with data acquisition devices and offers an open-source kit version along with a supporting toolchain, enabling rapid integration and secondary development.

Specifications

DoF 4 active + 3 passive	Weight 350 g	Dimensions 140 * 70 * 24 mm	Control Modes Position control, hybrid force-position control
Repetitive Positioning Accuracy ± 0.5 mm	Opening/Closing Time (Typ.) 0.5 s	Communication Interface CAN-FD/RS485	

Highlights



- Ultra-compact. Exceptional value.**
 - The smallest dexterous hand in the industry—mouse-sized and only 350g. Effortlessly performs everyday gestures like thumbs-up, fist, and high-five, making it the ideal standard for next-generation humanoid robots.
- Industrial Level Reliability, Designed for Real-World Scenarios**
 - Built with impact-resistant materials and a highly stable structural design, it enables robots to move freely—from dynamic actions like hand-supported cartwheels to everyday household tasks such as opening doors and handling dishes. Ready to use, out of the box, and built to last.
- A full-stack data-collection ecosystem, designed for developers.**
 - Natively compatible with Dex-UMI data-collection systems, with optional wrist-mounted camera support. Open-source kit and developer-friendly integration is also available.

Application Scenarios

... Service and Interaction ...
Gestures Interaction Supported



... Light-Duty Tasks ...
Pick-and-place | Tool use



OmniHand

As the industry's only compact, high-DoF commercial dexterous hand, it delivers universal compatibility across humanoid robots and greatly enhances interactive capabilities.

Specifications

DoF 10 active + 6 passive	Weight 510 g	Dimensions 180 * 85 * 38.5 mm	Payload Capacity Five-finger gripping strength ≥5 kg
Arrayed Sensors 300 + taxels (w/Tactile)	Force Perception Type Fingertips + palm + back of hand: 1D force	Array Resolution 0.1 N (w/Tactile)	Communication Interface CAN-FD/RS485

Highlights



- Compact and Lightweight**
 - Adaptive to humanoid robots of various models
- Adaptive Interaction**
 - More human-like gesture interaction, covering all common gestures plus an exclusive back-of-hand touch interaction
- Safe and User-Friendly**
 - Over 300 force-sensing taxels across the hand and an anti-pinch design for safer interaction

Application Scenarios

... Interactive Services ...
Gesture interaction, rock-paper-scissors
games, touch interaction



... Research and Education ...
Mobile manipulation, algorithm training



... Light-Duty Tasks ...
Object grasping, document delivery, etc.



OmniHand Pro

As a highly integrated all-around dexterous hand, it combines a compact, lightweight form factor with impressive load capacity, precision, speed, and multi-dimensional tactile sensing to enable intelligent task execution.

Specifications

DoF 12 active + 7 passive	Weight 820 g	Dimensions 207 * 98 * 56 mm	Maximum Fingertip Force 20 N (Typ.)
Force Perception Type 3D force sensing on all fingertips	Array Resolution 0.1 N	Communication Interface CAN-FD	Compatibility Compatible with mainstream robots and robotic arms

Highlights



- Human-Like Dimensions**
 - 19 DoF, only 820 g - the smallest, lightest, and most human-like dexterous hand in its class
- Multi-tasking**
 - Optimized configuration for easy manipulation of tools, with a single-finger force of up to 20 N
- Superior Sensing**
 - Multi-modal sensing (position, normal force, tangential force) with 0.1 N-level high sensitivity, powered by AI algorithms

Application Scenarios

... Research and Education ...
Imitation learning | Reinforcement learning



... Industrial Automation ...
High-intensity precision tasks | Grasping and sorting | Flexible automation



... Data Acquisition and Teleoperation ...
Data acquisition | Algorithm training | Imitation and reinforcement learning



OmniPicker 3

OmniPicker 3 is an industrial-grade adaptive gripper designed for embodied intelligence applications. With comprehensive hardware and structural upgrades, it delivers over 100N of gripping force, supports 1 million full cycles, and enables high-precision force control. It also supports integration with depth or fisheye cameras. Engineered for cost-effective scalability, it provides industrial-level performance and reliability.

Specifications

Weight 800 g	Max Force 140 N	Max Stroke 120 mm	Min Force 1-2 N
Maximum Payload 5 kg	Repetitive Positioning Accuracy ±0.1 mm	Absolute Positioning Accuracy 0.5 mm	Communication Interface CAN-FD/RS485

Highlights



- Adaptive Grasping**
 - Compatibility with both standard items and irregular items, quick material changeover, and improved flexibility
- Tactile and Force-Controlled Capabilities**
 - High tactile coverage with precise force control, supporting open data acquisition.
- High Value × High Stability**
 - Industrial scalable cost and deployment-ready performance under industrial-grade strength and lifetime standards.

Application Scenarios

... Industrial and Logistics ...
Grasping



... Data collection ...
Grasping data and force control data



AGIBOT C Series

AGIBOT C5 | AGIBOT C4 | AGIBOT C2 | AGIBOT C2P



AGIBOT C5

AGIBOT C5 is our first intelligent cleaning robot for mid-to-large scale indoor environments, integrating sweeping, scrubbing, and dry mopping into a single, versatile unit. It comes with an advanced multi-sensor system that fuses LiDAR and visual perception, enabling it to effortlessly navigate diverse and complex environments. The fully automated station supports Auto Charging, Auto Refill & Drain, and Dirty Water Tank Self-Cleaning, drastically reducing maintenance efforts. AGIBOT C5 delivers a higher quality clean while lowering labor costs, offers data-driven insights to operations, and provides a smart, effortless experience – perfectly supporting the move towards smart property management.

Specifications

I AGIBOT C5

Debris Pickup Rate 95 %	Total Weight 170 KG	Dirty Water Tank Self-Cleaning 4 min	Battery Specifications 24 V, 80 Ah	Max Cleaning Efficiency 1,980 m²/h	Operating Noise <68 db(A)
Fan Lifespan 10,000 h	Extra-Large Water Tank Capacity 90 L	Scrubbing Endurance 3 h	Downforce Pressure 25 kg	Scrubbing Width 550 mm	

I Station

Water Tank Capacity 8 L	Clean Water Refill Speed 7-10 L/min	Dirty Water Drain Speed 10-15 L/min	Max Power 1,800 W	Rated Input Voltage 200-240 V
-----------------------------------	---	---	-----------------------------	---

Highlights

Dual-roller brush system that combines sweeping and scrubbing; high water flow and downforce pressure for tackling stubborn stains in a single pass.

Precision edge cleaning with missed spot detection, ensuring total, corner-to-corner coverage

A pioneering dual-chamber squeegee design, minimizing water residue in crevices for a drier finish

Premium components, featuring a fan with a 10,000-hour lifespan, ensure the lowest possible life-cycle costs.

Scrubbing width: 550 mm; theoretical cleaning efficiency: up to 1,980 m²/h

LiDAR + visual perception positioning, offering excellent adaptability in various scenarios

Simple maintenance: Industry-first self-cleaning dirty water tank, cutting the daily maintenance time in half

Auto Charging, Auto Refill & Drain, and Dirty Water Tank Self-Cleaning, combined with access control and elevator integration, achieving a high level of unmanned operation



Scan to watch videos

Application Scenarios

... Factories ...




... Transportation Hubs ...



... Commercial Complexes ...




... Large Supermarkets ...

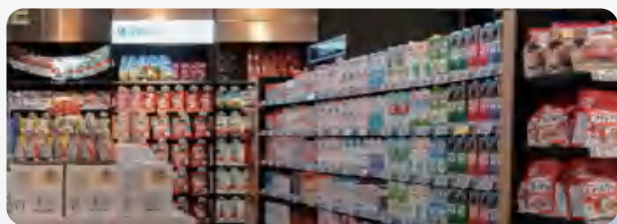

... Medical & Education Systems ...



... Lobbies ...

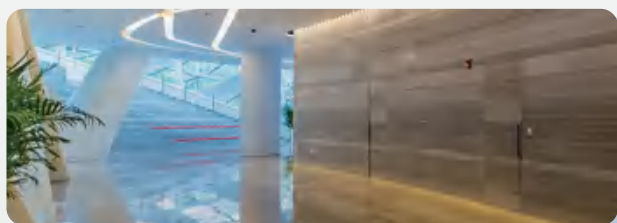

Compatible Surfaces


Epoxy flooring



Marble




Ceramic Tiles

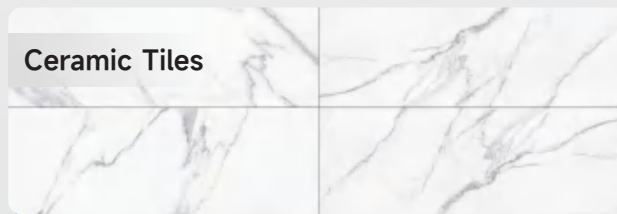

Terrazzo



Emery Flooring

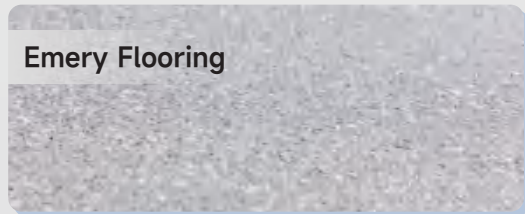

PVC



AGIBOT C4

AGIBOT C4 is our intelligent cleaning robot for small-to-mid scale indoor environments, integrating sweeping, scrubbing, and dry mopping into a single, versatile unit. It features excellent narrow-aisle navigation capability, using multi-line LiDAR + visual perception for positioning, with automatic map updates to effortlessly navigate through variable and ever-changing environments. The fully automated station supports Auto Charging, Auto Refill & Drain, Cleaning Solution Refill, and is capable of self-cleaning the roller brush system, squeegee, dirty water tank, and station, drastically reducing maintenance effort. The AGIBOT C4 robot is designed with exceptional versatility in various scenarios, a long-life design, and self-diagnoses over 90% of faults, reducing the total cost throughout its lifecycle. It can help property maintenance companies achieve digitalized upgrades, making operations more efficient and cost-effective.

Specifications

I AGIBOT C4

Dimensions 680 * 510 * 1,015 mm	Battery Specifications 24 V, 60 Ah	Max Cleaning Efficiency 1,400 m²/h	Scrubbing Endurance 3 h	Charging Time 1.5 h	Operating Noise <65 db(A)
Clean/Dirty Water Tank Capacity 25 L/25 L	Scrubbing Width 380 mm	Cleaning Width (Side Brush) 600 mm	Squeegee Width 540 mm	Min Aisle Width 600 mm	Turning Radius 800 mm

I Station

Water Tank Capacity 4 L	Clean Water Refill Speed 5-8 L/min	Dirty Water Drain Speed 4-8 L/min	Max Power 1,200 W	Rated Input Voltage 200-240 V
-----------------------------------	--	---	-----------------------------	---

Highlights

Agile Movements: Can pass through 60 cm gaps, and turn within 80 cm, enabling effortless navigation within the width of a floor tile

No Manual Intervention: One-touch intelligent zone-based route planning, with Auto Charging, Auto Refill/Drain, and Cleaning Solution Refill features, eliminating the need for manual interventions

Adaptable to Various Scenarios: Uses multi-line LiDAR + visual perception for positioning, with automatic map updates to handle dynamic, changing environments

Ultimate Stability: High-spec hardware design with pre-filtration of dirty water, significantly reducing the risk of valve and pump clogging (ISO9001 certified)

Comprehensive Cleaning: Combines sweeping, scrubbing, and mopping, with an innovative water-retention scrubbing design, achieving perfect cleaning even with minimal water usage

Effortless Maintenance: Equipped with a roller brush module, squeegee, and wastewater tank, it features full self-cleaning capability, reducing the daily cleaning workload by over 60%


All-in-one Cleaning: Has a front-sweeping and rear-scrubbing design, ensuring a debris pickup rate of 95%, dry/wet separation, achieving an all-in-one, high-standard cleaning performance

Reduced Costs: Long-life design with over 90% fault self-diagnosis, reducing total lifecycle costs



Application Scenarios


... Supermarkets ...

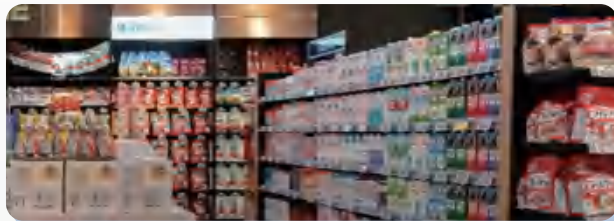

... Subway Stations ...



... Factory Warehouses ...

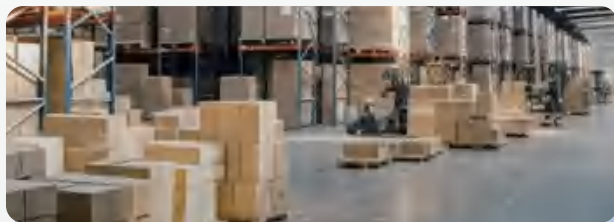

... Hotels ...



... Office Buildings ...



... Exhibition Halls & Stores ...



Compatible Surfaces

Marble




Epoxy flooring




PVC



Ceramic Tiles

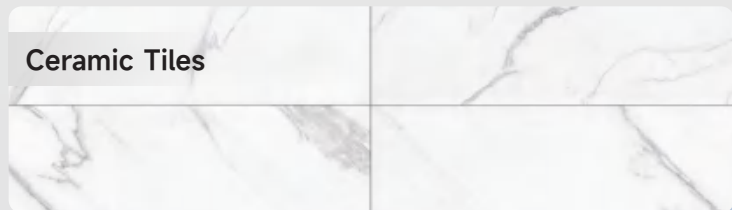

Emery Flooring

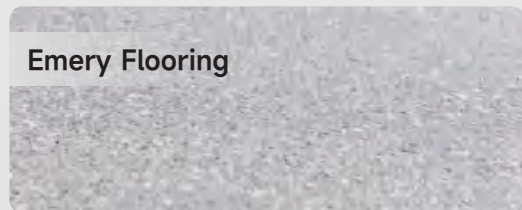

AGIBOT C2

AGIBOT C2 is a compact commercial robot designed to clean small indoor areas of 500–1,000 m². It features a compact and agile design, multi-functionality, intelligent recognition, and cloud-based control, enabling intelligent, unattended, and digitalized cleaning operations.

Specifications

I AGIBOT C2

Cleaning Efficiency 300–700 m²/h	Total Weight 17.5 kg	Dustbin Capacity 1.3 L	Battery Specifications 25 Ah	Walking Speed 0.4–0.6 m/s	Gradeability 10°
Dirty Water Tank Capacity 3.5 L	Clean Water Tank Capacity 4 L	Scrubbing Endurance 4 h	Charging Time 2 h	Cleaning Width 390 mm	Edge Cleaning Distance ≤50 mm

I Station

Dustbin Capacity 10 L	Station Feature Auto Charging	Station Feature Auto Refill & Drain	Station Feature Auto Dust Collection	Station Feature Mop Drying
---------------------------------	---	---	--	--------------------------------------

Highlights

Automatically switches between Dry Mop, Vacuum, and Wet Mop modes to adapt to various floor types

Intelligently communicates with elevators, access gates, and access control systems to navigate multiple floors without interruption

Enables true 24/7 unattended operation based on industry-leading mop self-drying technology, plus Auto Dust Collection, Refill & Drain, and Charging features

Intelligently identifies waste types and stain levels, and dynamically adjusts cleaning strategies

Features an ultra-slim 39 cm body and low-profile design, effortlessly reaching into tight spaces such as under dining tables and between shelves



Application Scenarios


... Office Buildings ...




... Serviced Apartments ...



... Retail Stores ...

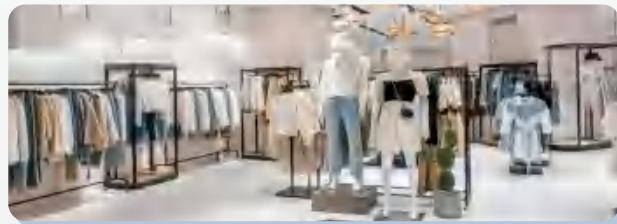


... Supermarkets ...

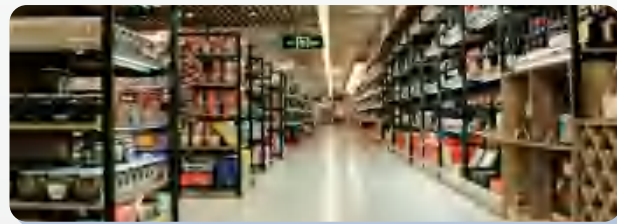

... Exhibition Halls ...



... Office Lobbies ...

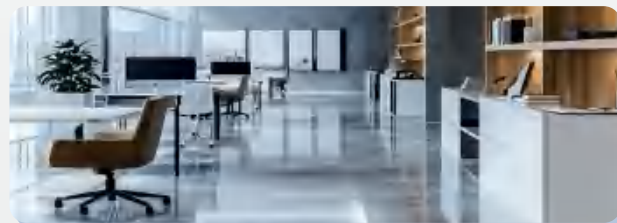

Compatible Surfaces

Carpet



Marble



PVC



Ceramic Tiles



AGIBOT C2P

AGIBOT C2P is a compact commercial robot designed to clean indoor small areas of 500–1,000 m². It features compact and agile design, multi-functionality, intelligent recognition, and cloud-based control, delivering an intelligent, unattended, and digitalized cleaning solution.

Specifications

AGIBOT C2P

Overall Dimensions 520 * 510 * 680 mm	Total Weight 22.5 kg	Dustbin Capacity 1.3 L	Battery Specifications 23 Ah	Walking Speed 0.4–0.6 m/s	Gradeability 8°
Dirty Water Tank Capacity 3.5 L	Clean Water Tank Capacity 4 L	Endurance 4 h (2 h continuous operation with a full water tank)	Charging Time 2 h	Cleaning Efficiency 180–250 m²/h	Edge Cleaning Distance <50 mm
Dustbin Capacity 1.3 L	Obstacle Clearance Height 30 mm	Cleaning Width 390 mm	Min Clearance Height 700 mm		

Highlights

Automatically switches between Sweep, Vacuum, Dry Mop, and Scrub modes

Features an all-in-one station that supports Auto Charging, Auto Refill & Drain, and Roller Brush Self-Cleaning, and barrier-free access to elevators and access gates

Automatically adapts to various cleaning attachments without manual setup and lifts the roller brush in carpeted areas

Supports cloud-based remote task management, enabling multi-dimensional data analysis and visualized data management


Operates in Quiet Wet Mop mode at under 60 db, making it ideal for overnight cleaning without causing disturbances

Equipped with a mobile water station for environments without fixed plumbing



Application Scenarios

... Supermarkets ...

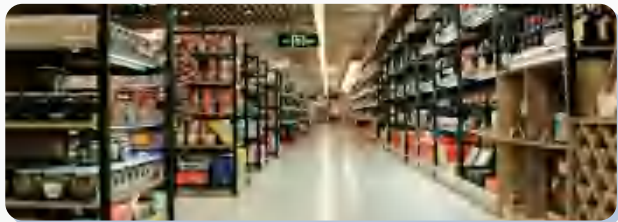

... Office Buildings ...



... Serviced Apartments ...



... Retail Stores ...



... Exhibition Halls ...



... Office Lobbies ...




Compatible Surfaces

Carpet



Marble

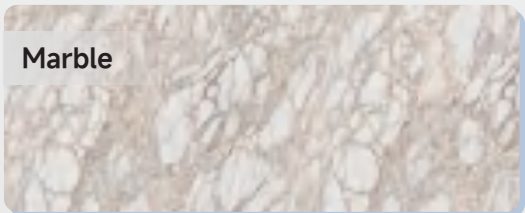

PVC



Ceramic Tiles

